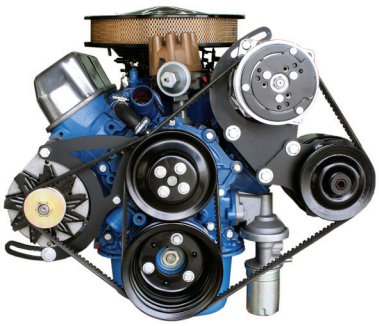

131107 Small Block Ford compressor bracket with **131108** power steering bracket and **131112** alternator bracket.

Ford Mount Brackets, Compressor/Alternator

Simple and economical solutions to get your Ford-powered classic air conditioned with ease.
Steel plate brackets to mount compressor, alternator and power steering on some applications.

15111-VFB	170-200" Six cylinder compressor bracket.
15114-VFB	292-312" Y-Block V8 compressor and alternator bracket (Will not fit F-100 pickup with front motor mount).
131109	292-312" Y-Block V8 (T-Bird only). For 507 compressor, use VA #04807-VUA.
131111	272-312" Y-Block comp/alt bracket kit (Requires 3-groove crankshaft pulley or 2-groove add-on pulley, 730004 shown on Page 81).
131105	289, 302, 351 Windsor driver-side top-mount compressor bracket.
131107	289, 302, 351 Windsor driver-side mid-mount compressor bracket.
131108	289, 302 & 351 Windsor driver-side power steering bracket
131112	289, 302 & 351 Windsor passenger-side alternator bracket
15110-VFB	260" V8 and pre-'69 289 V8 compressor bracket.
131351	Ford Cleveland V8.
131110	289, 302 V8 1964-68 with idler pulley (single-groove water pump pulley).
131005	332, 352, 360, 390, 406, 410, 427, 428 FE V8 compressor bracket ('65-up).
15118-VFB	460" V8 1975-80 with or without power steering, air pump.

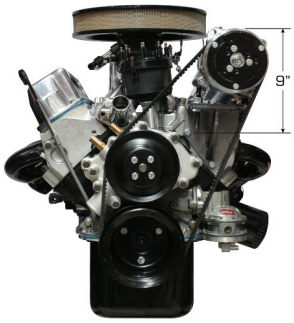

131105 Small block Ford compressor bracket

131111 Y-Block bracket

Ford Flathead Applications

Flathead Mount Brackets, Compressor/Alternator

For use with GM alternator and Sanden compressor. May be used with multiple carburetion. Offset water neck available for '49-53 engines. Single wide-groove compressor and alternator available for all installations. (Will not fit with tri-power or Super Dual set-up).

131002	1937-1948 Flathead comp/alternator for use with single wide-groove compressor pulley.
131003	1949 Flathead comp/alternator for use with single wide-groove compressor pulley.
131004	1950-53 Flathead comp/alternator*for use with double standard-groove pulley.
	Note: Requires offset water necks (2 per bracket).
70654-VUQ	Polished aluminum offset water neck
739001	Chrome GM wide-groove alternator pulley

Note: Must use electric fan with these brackets.

131004 Flathead bracket

Vintage Air ProLine Flathead Bracket System, Compressor/Alternator

Vintage Air, with Casey and Jim Cook of Jimco flathead builders developed this stylish and versatile kit. Mounts both compressor and GM 12SI alternator on a brushed or polished aluminum bracket. Mounts to original generator bolt flange and clears most multi-carb setups.
For 1937-48, 59 A-B engines.
Uses single wide-belt compressor and alternator pulleys.

172008 Machined finish bracket kit
172009 Polished finish bracket kit

One piece aluminum mounting bracket

Mopar Applications

Mount Brackets, Compressor/Alternator

Simple and economical solutions to get your Mopar-powered classic air conditioned with ease.
Steel plate brackets to mount compressor, alternator and power steering on some apps.

161004	Mopar 318-360 V8 engines, early to 1969 top-mount compressor and alternator.
162774-SDA	Mopar 318, 340, 360 V8 with power steering, without smog pump 1970 to 1978 (compressor and alternator bracket).
15121-VMB	Mopar V8 (compressor mount only) 1970 to 1982 (without factory air).
161002	Mopar 383/440 compressor and alternator (with power steering only).
166009	1966-70 Mopar 383/440 water pump tensioner kit.
151007	1955-58 Chrysler 331, 354 Hemi and 301, 331, 354 Poly.
NEW!	Mounts compresor and alternator. Includes crank pulley kit. (Requires 042916 alternator and 04807 compressor.)

161002 Big Block Mopar bracket

162774-SDA Small Block Mopar bracket

FACTORY TOUR

Our tubing shop team leader Chris Castellano (left) and Javier Mercado (right) create the vehicle-specific hard lines for our SureFit kits. Our CNC benders ensure that every line is manufactured to the print for a factory installed look - another Vintage Air advantage!